

Video Door Phone Quick Installation Guide




i33V



i33VF

1 Package Contents

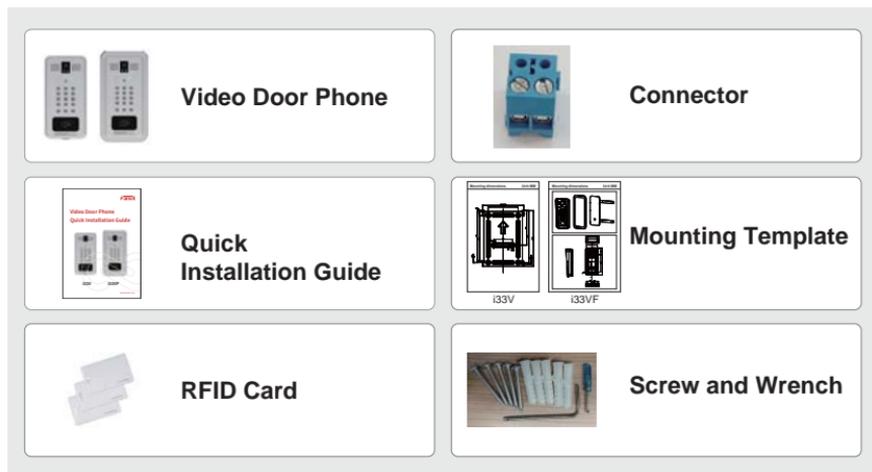

2 Physical specification

Device size	295 x 142 x 62 (mm)
-------------	---------------------

1) Panel



LCD


LCD	Status	Description	Status	Description
		Connected to the Internet		Not connected to the Internet, flashing
		SIP register success		SIP register fail, flashing
		Connected to the TR069		Not connected to the TR069, flashing
		Lock off		Lock on
		Fault prompt 1 (with error number)		Fault prompt 12 (? : flashing)
		Call failed (no response)		Ringing
		Dialing		Open the door


Function Key

Key	Description
C	Call Key, Enter the number and press C to dialing out.
K	Password mode, "K password # "
B	Backspace Key, Enter the number and press B to delete
Numeric keypad	Input password or dialing

2) Interface description

Open the rear case of the device, there is a row of terminal blocks for connecting the power supply, electric lock control, etc. The connection is as follows:

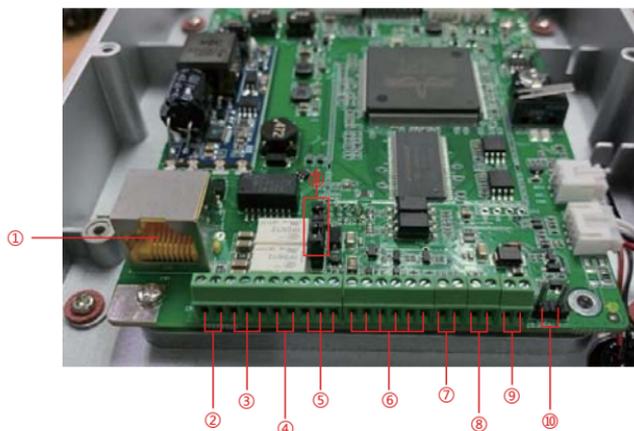

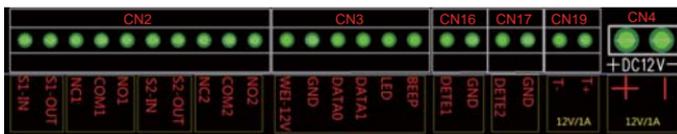

Serial number	Description
1	Ethernet interface: standard RJ45 interface, 10/100M adaptive, it is recommended to use five or five types of network cable
2、4	Two sets of short-circuit input detection interfaces: for connecting switches, infrared probes, door magnets, vibration sensors and other input devices
3	Short circuit output 1: drive / short circuit output configurable
5	Short-circuit output 2: corresponding to the short-circuit input interface, login device webpage setting, can be connected to the electric lock, alarm device, etc.
6	Wiegand interface
7、8	Two sets of door magnetic detection
9	Temperature control power interface: 12V/1A input
10	Power interface: 12V/1A input
11	JP1 jumper

JP1 Jumper

There are two modes for power supply of electric-lock as shown in the picture below. (The default is "Passive Mode:").

Passive Mode: When the electric-lock starting current is more than 12V/500mA, need to use the external drive mode, the electric lock interface for short circuit output control.

Active Mode : When the electric-lock starting current is less than 12V/500mA, can use the internal drive mode, the electric lock interface is 12V DC output.



Jumper in passive mode



Jumper in active mode

3) Wiring instructions:

NO: Normally Open Contact

COM: Common Contact

NC: Normally Close Contact

Driving Mode		Electric-lock Mode		JP1 Jumper	Connections
Active	Passive	No electricity when open	Electrify when open		
√		√			<p>12V Power Supply 12V/1A Indoor switch S I S-O NC COM NO Electric lock (Normally Open Mode) No electricity when open the door</p>
√			√		<p>12V Power Supply 12V/1A Indoor switch S I S-O NC COM NO Electric lock (Normally Close Mode) When the power to open the door</p>
	√	√			<p>Door Phone Power Input S I S-O NC COM NO Power Supply 12V/2A Indoor switch Electric lock (normally open type) No electricity when open the door</p>
	√		√		<p>Door Phone Power Input S I S-O NC COM NO Power Supply 12V/2A Indoor switch Electric lock (normally closed type) When the power to open the door</p>
	√	√			<p>External Power Supply Door Phone Power Input S I S-O NC COM NO Indoor switch Electric lock (normally open) Without power to open the door</p>

3 Installation

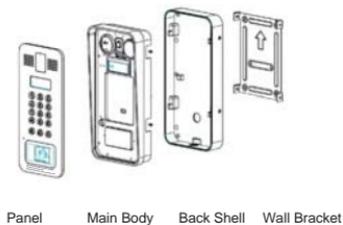


Figure 3-1 Four Major Parts of i33V

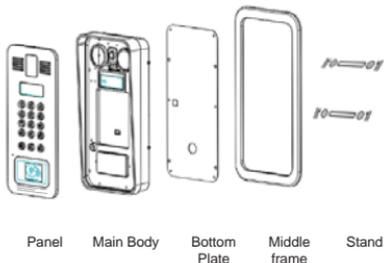


Figure 3-2 Five Major Parts of i33VF

Step 1: Installation preparation

A. Check the following contents:

- Hex wrench x 1
- TA5 x 40mm screws x 4
- 35mm screw anchors x4

B. Tools that may be required:

- Hex wrench
- Phillips screwdriver, hammer, RJ45 crimper
- Electric impact drill with an 8mm drill bit

Step 2: Drilling

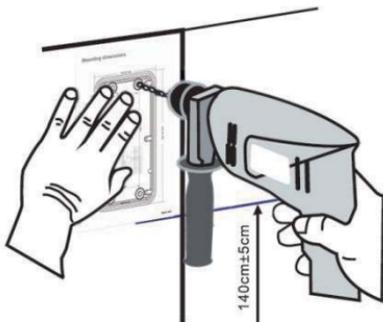


Figure 3-3 Wall Mounting / Built-in

A. Place the mounting template with dimensions on the surface of a wall in a desired flat position.

B. Use an electric drill to drill the 4 holes marked on the mounting template. It is recommended to drill about 50mm deep. Remove the template when finishing drilling.

C. Push or hammer screw anchors into the drilled holes.

Step 3: Removing hanging shell

- i33V

A. Use a screwdriver to remove the 4 screws on both sides and separate the rear case from the wall bracket, as shown in Figure 3-4.

B. Use a screwdriver to remove the 6 screws on the back of the rear case and separate the rear case, as shown in Figure 3-5.

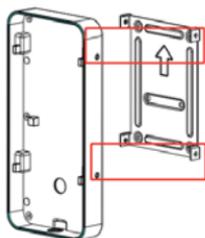


Figure 3-4



Figure 3-5

- i33VF

Use a screwdriver to remove the 6 screws on the back of the rear case and separate the rear case, as shown in Figure 3-6.

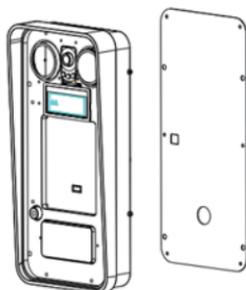


Figure 3-6

Step 4: Install the wall bracket, wiring and casing

- i33V

A. Align the screw holes of the wall bracket with the holes in the wall and fix them to the wall with the TA5 x40mm screws, as shown in Figure 3-7.

B. Pass all the wires through the silicone plug in the middle of the bottom case. All lines should be reserved for 15~20CM length, as shown in Figure 3-8.

Note: The outlet hole of the bottom case faces down.



Figure 3-7

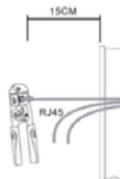


Figure 3-8

C. Connect the cables of RJ45, power, and electric-lock to the motherboard socket as mentioned in connectors description (refer to Section 2).

D. Connect the terminal of the wired cable to the motherboard socket (refer to Section 2).

E. Test whether there is electricity by doing the following:

Press the # button for 3 seconds to get the IP address of intercom by voice.

Input access password or press the indoor switch to check electric-lock installation.

Note: Do not proceed mounting until you have finished the electric checking.

F. Lock the rear case to the main body by locking the 6 screws previously removed into the corresponding position of the rear case.

G. Lock the rear case and the wall bracket by locking the 4 screws previously removed into the corresponding positions on both sides.

H. To ensure a waterproof seal, tighten the screws.

● i33VF

A. Pass all the wires through the silicone plug in the middle of the bottom case. All lines should be reserved for 15~20CM length, as shown in Figure 3-8.

Note: The outlet hole of the bottom case faces down.

B. Connect the cables of RJ45, power, and electric-lock to the motherboard socket as mentioned in connectors description (refer to Section 2).

C. Connect the terminal of the wired cable to the motherboard socket (refer to Section 2).

D. Test whether there is electricity by doing the following:

Press the # button for 3 seconds to get the IP address of intercom by voice.

Input access password or press the indoor switch to check electric-lock installation.

Note: Do not proceed mounting until you have finished the electric checking.

E. Lock the bottom plate to the main body by locking the 6 screws previously removed into the corresponding position on the bottom plate

F. Put the decorative piece from the back to the front, pay attention to the front and back of the decorative piece, as shown in Figure 3-9.

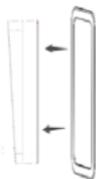


Figure 3-9

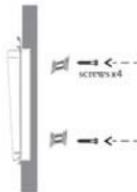


Figure 3-10

G. Put the installed machine into the groove in the door, tighten it from the back of the door with 4 screws, and fix the machine with the decorative piece and bracket, as shown in Figure 3-10.

H. To ensure a waterproof seal, tighten the screws.


4 Searching Door Phone

There are two methods as shown below to search the device.

Method 1:

Open the iDoorPhone Network Scanner. Press the Refresh button to search the device and find the IP address.

(Download address <http://download.fanvil.com/tool/iDoorPhoneNetworkScanner.exe>)

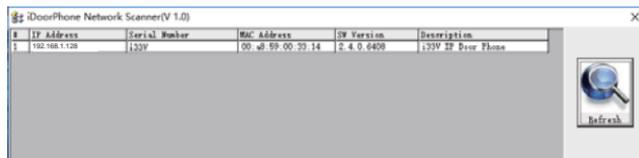

Method 2:

Long press DSS key for 10 seconds(after power-on for 30 seconds), and when the speaker beeps rapidly, press DSS key again quickly, the beeps stop ,the intercom will report the IP address by itself.

In addition, device provides the device surface DSS key operation to switch IP address acquisition mode: Long press the DSS key for 10 seconds, to be issued by the speaker Beep, and then press the DSS key three times, the beep stops. Wait 10 seconds, after the success of the system automatically broadcast the current IP address.

5 IP Door Setting

Step 1: Log in the door phone

Input IP address (e.g. http://192.168.1.128) into address bar of PC's web browser. The default user name and password are both admin.



Step 2: Add the SIP account.

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters. Select "Activate", and then click Apply to save this setting.



Step 3: Door Phone Setting



6 Door Unlocking Setting

Local

1) Local Password

Step 1: Go to **EGS Setting** → **Features** → Set **Local Password** (The default is "6789").


Step 2: Use the device's **Numeric Keyboard** to input **password** and **"#"** key, and then the door will be unlocked.



2) Private Access Code

Step 1: Go to **EGS Access** → **Access Rule** → set **Access Code**.


Step 2: Use the device's **Numeric Keyboard** to press **K** and enter the **Access Code** and press **#** to end, the door will be unlocked.

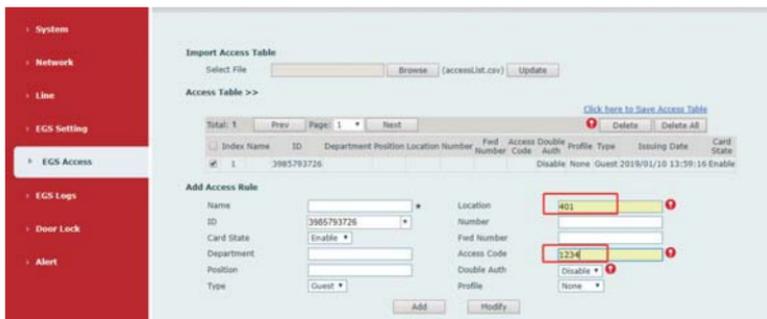

RFID Card

Step 1: Go to **EGS Access** → Enter the Name and ID Number (Only Front 10 yards) → Press **Add** to Access Table.

Step 2: Use pre assigned RFID cards to unlock the door by touching RFID area of device.

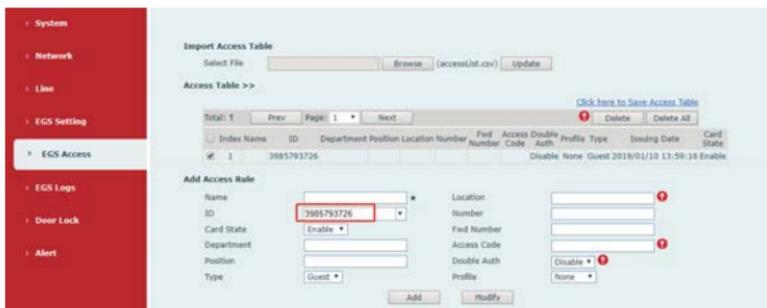

Remote Password

Step 1: Go to **EGS Setting** → **Features** → Set **Remote Password** (The default is "").

Step 2: To answer the call made by visitor via SIP phone, press the "" key to unlock the door the visitor.





Fanvil Technology Co., Ltd

Add: 4F, Block A, Building 1#, GaoXinQi Hi-Tech Park (Phase-II),
67th District, Bao'An, Shenzhen, China P.C:518101

Tel:0755-2640-2199 Fax:0755-2640-2618 Email:sales@fanvil.com